




WEISER LOCK®
Powerbolt 1000®
HOME ACCESS SYSTEM

**Touchpad Electronic Deadbolt
Installation & Learning Instructions**

Enclosed Pieces

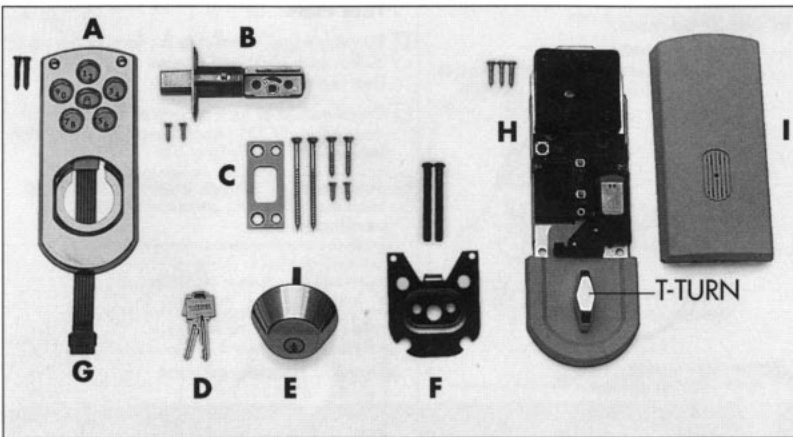

Pieces

- A** Touchpad
- B** Latch
- C** Strike
- D** Keys
- E** Deadbolt
- F** Mounting Plate
- G** Power Strip
- H** Power Board
- I** Access Cover

Important Notes:

Use the components from this package, make no substitutions.

Consult local building codes for requirements in your area.

Read all instructions and lay out parts as shown.

Under normal use it is recommended to replace the batteries in the Power Board once a year.

1. Door Preparation

Replacement Installation



- Remove all old lock components.
- Use the enclosed template to verify the following:
 - Deadbolt face hole needs to be 2-1/8" (54mm) diameter.
 - Backset – Distance from edge of door to center of lock (2-3/8 to 2-3/4").
 - Location to drill the small starter holes for inside and outside trims.
 - Make any necessary modifications.

First-time Installation

Follow instructions on enclosed template.

2. Deadbolt Latch Installation (Piece B)


Important Notes:

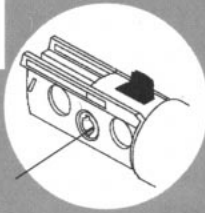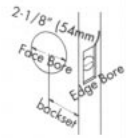

Install deadbolt latch with hub down and bolt extended. Key should NOT be in deadbolt during installation.

To Adjust Backset:



Rotate counter-clockwise to 2-3/4" (70mm) position.

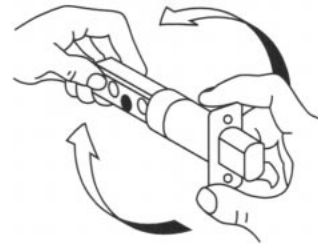

Rotate clockwise to 2-3/8" (60mm) position.

Face Plate

- Keeping edges parallel to the face of the door, outline face plate and remove deadbolt latch (see illustration below left).
- Chisel outline of face plate until it is flush with door edge, 5/32" (4mm) deep (see illustration below right).
- Insert deadbolt latch in edge hole. Be sure to keep the hub down. Secure with two 5/8" wood screws.

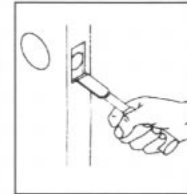
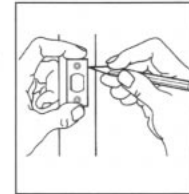


3. Strike Installation (Piece C)

Drive-In



- Insert deadbolt latch into edge hole keeping flat edge of bolt parallel to the face of door (see illustration below left).
Retract bolt.

- Using a wood block, tap with hammer until surface of collar is flush with door edge (see illustration below right).
Re-extend bolt.

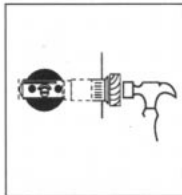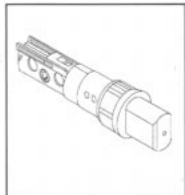

First-time Installation

- For easy location of strike hole, we recommend smearing color (such as grease pencil or crayon) on dimple on the end of the deadbolt latch. Retract bolt and close door. Extend bolt, leaving mark on door jamb.
- Drill a 1-1/8" diameter (28.5mm) hole, 1-1/4" (29mm) deep, in door frame centered on mark made in instruction 1.
- Center strike over hole and trace around strike. Chisel out door frame until strike is flush.
- Position strike with large holes toward door stop. Pre-drill large holes 3" (76mm) deep. Install 3" (76mm) screws in large strike holes and install remaining 5/8" wood screws in smaller holes.
- Close door and ensure bolt extends and retracts freely.

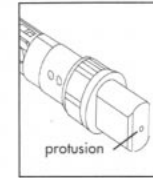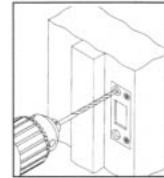

Important Note:

Deadbolt latch must enter strike with no resistance or the Powerbolt Touchpad Electronic Deadbolt will not work properly.


4. Electronic Deadbolt Installation →

Important Note:


Deadbolt needs to be in extended position.

4. Touchpad Electronic Deadbolt Installation


- Place Touchpad **A** on outside of door and place power strip **G** through door over top of latch **B**.
Note: Do not remove backing from Touchpad.

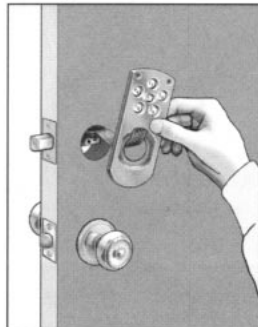


- With key removed, place deadbolt **E** against Touchpad **A** with tailpiece in vertical position.

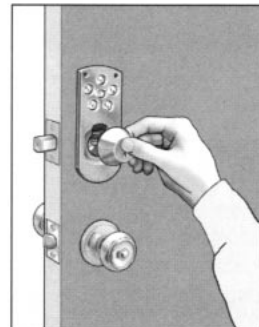


- Attach deadbolt with 2 large black bolts through mounting plate **F** as shown. Power strip **G** should extend out.

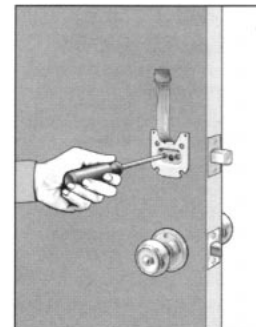


- Line Touchpad **A** up with small holes from template and attach with two 1" oval head screws. Do not over-tighten screws.

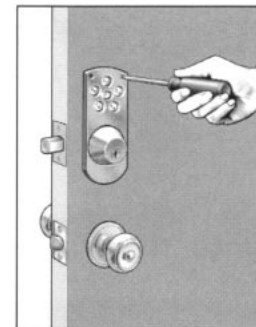


5 Remove access cover I from Power Board H. Hold as shown in photo and twist or pull up on cover.

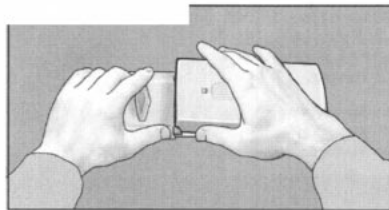

6 Feed power strip G through large square hole of Power Board H and plug into the 6 prongs.

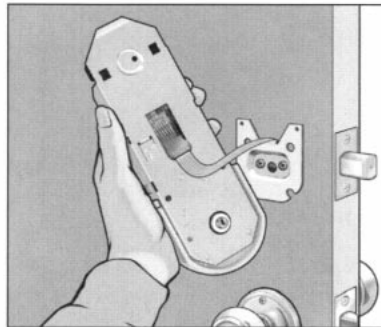

7 Line Power Board H up to the 3 small holes drilled from the template. Verify vertical tailpiece engages T-turn and attach power board with 3 chrome-colored screws.

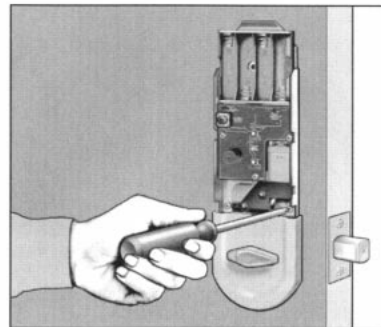


8 Install 4 new AA Alkaline batteries (not included in package). Battery positions shown on battery case. A series of quick beeps will sound when batteries make complete contact.


Low Battery Indicator Light on the Power Board will be lit when the batteries need to be replaced.

4. Touchpad Electronic Deadbolt Installation (continued)

9 Retract deadbolt latch B with T-turn. Press the lock button on Touchpad A. If motor runs but latch does not extend: You have a left hand door. All locks are preset for right hand doors. (See diagram at right.)

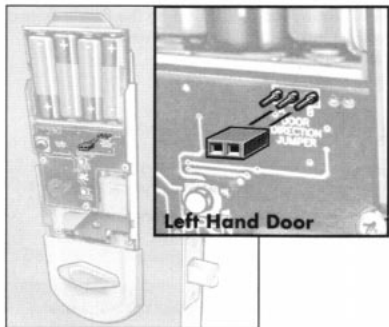

10 Verify key works in deadbolt E.
Note: When manually locking or unlocking the deadbolt by turning the key or the T-turn: The motion will be firm — this resistance is normal.

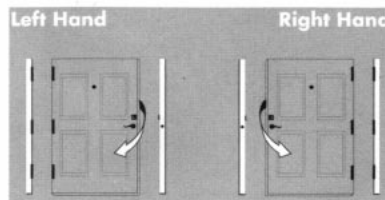

If the hinge is on the **left** side of the door, then the door is **left** handed.

If the hinge is on the **right** side of the door, then the door is **right** handed.



5. Programming Instructions

1 Push program button on Power Board H once.

2 Enter desired 4 to 8 digit code by pressing numbers on outer Touchpad A. Press the Lock button on Touchpad to set your code.

3 You will hear a 2-second long beep when your code is accepted.

If unit does not beep — too much time has elapsed between steps 1 and 2. Repeat steps 1 and 2 faster.

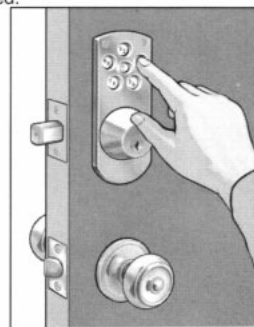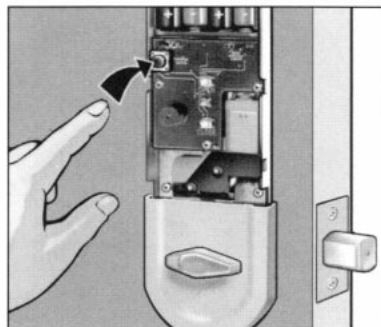

4 Enter your number to verify that it retracts the latch B.


To Enter Second Code

Push program button twice, then repeat steps 2-4.

5 Snap access cover I onto power board H. Align cover to top of power board and press down at the bottom of the cover (see illustration

Important Note:

This electronic lock will hold two different codes. Random codes are factory set for testing purposes. It is recommended that you enter two new security codes. New codes override/delete old existing codes.

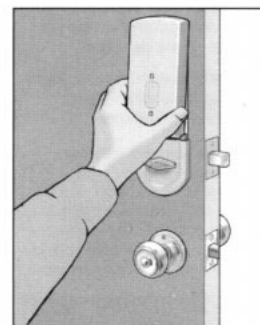

below). To coordinate with your home decorating scheme, the access cover may be painted to match your door.

6. Proper Operation of Touchpad Electronic Deadbolt

1 Push the Lock button on outside touch pad to extend latch bolt 1" which locks the door when you leave.

2 Enter your desired personal code to retract the latch bolt completely which unlocks the door when you return home.

3 The T-turn on the inside of the door is used to extend (lock) or retract (unlock) the latch bolt when you are inside.

4 Using the key from the outside will also extend (lock) or retract (unlock) the latch bolt.

5 This Touchpad Electronic Deadbolt should be accompanied by a Weiser Lock Passage (non-locking) Knobset, Leverset, or Handleset.

